


## CONNECTION AND SETTING GUIDE

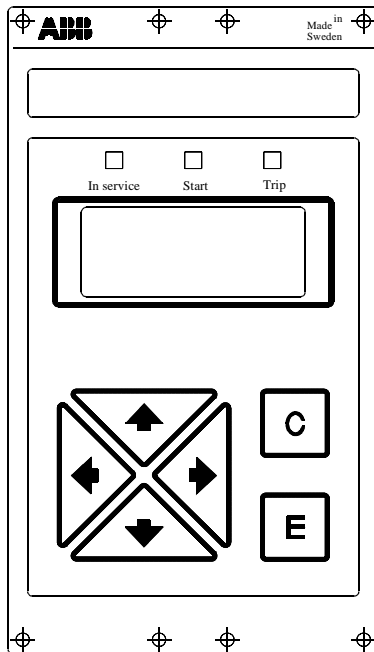

Front layout

### General

The compact current relay RXHL 411 is available to order in four different variants, more information is available on page 4.

Location:	Partially weather protected locations, switchgear environment, class 3K3
Pressure:	80-106 kPa
Temperature:	-5° C to +55° C (permitted range) -40° C to +70° C (storage range)
Humidity:	10-90%
Ingress protection:	IP 44
Installation category:	III
Electric safety class:	II
Frequency:	50/60 Hz
Rated current:	$I_r$ : 1 A or 5 A $I_{Nr}$ : 0,1 A, 1 A or 5 A
Auxiliary voltage:	+/- 24 V (from DC/DC-converter)
Power consumption:	Maximum 5,5 W (without DC/DC-converter)
Binary-input:	48-60 V DC or 110-220 V DC
Binary-output:	Maximum voltage, 250 V AC/DC Current carrying capacity, continuous 5 A

### Indications

<b>LED indications:</b>	Green LED indicates In service
	Yellow LED indicates Start
	Red LED indicates Trip

**Without removing the plastic cover the primary service values, indications and primary trip values can be checked and cleared by pushing the “C” button.**

### **Push button Let you...**



1. Move upwards in menu tree.
2. Turn-off display at main menu.
3. Read service values and disturbance information.



1. Confirm choices in menu.
2. Move downwards in menu tree.



1. Move left in dialog boxes and editable menus.
2. Move upwards in menu tree.
3. Turn-off display at main menu.



1. Move right in dialog boxes and editable menus.
2. Move downwards in menu tree.




1. Move upwards in specific menu.
2. Increase editable values.
3. Select choice in dialog box and configuration.



1. Move downwards in specific menu.
2. Decrease editable values.
3. Select choice in dialog box and configuration.

**MENU TREE OF RXHL 411**

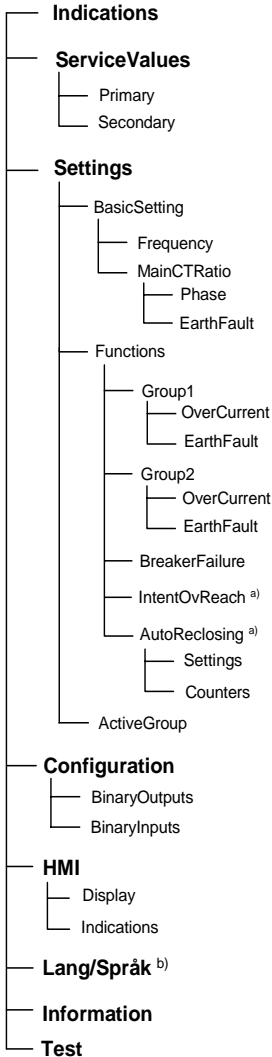

<sup>a)</sup> Functions available as options

<sup>b)</sup> English and the other available language is swedish

**Binary input functions:**

- Block or Enable I>, I>>, I>>>, I<sub>N</sub>>, I<sub>N</sub>>> and I<sub>N</sub>>>>
- Reset LED's and thermal heat counter
- External start of breaker failure
- Alternative setting group
- Circuit-breaker closed (automatic reclosing)
- Circuit-breaker ready (automatic reclosing)
- Block automatic reclosing function

**Binary output functions:**

- Start I>, I>>, I>>>, Ø>, I<sub>N</sub>>, I<sub>N</sub>>> and I<sub>N</sub>>>>
- Trip I>, I>>, I>>>, Ø>, I<sub>N</sub>>, I<sub>N</sub>>> and I<sub>N</sub>>>>
- Re-trip of breaker-failure
- Back-up trip of breaker-failure
- Setting group 2 active
- In service
- Intentional overreach trip
- Automatic reclosing is activated
- Automatic reclosing is ready
- Automatic reclosing is started
- Reclosing pulse to circuit-breaker
- Unsuccessful reclosing

**Indications:** The menu provides information about the recorded events.  
Unfilled squares for no recorded events (since last clearing).  
Filled grey squares for previous recorded event.  
Filled squares for latest recorded event.

Recorded events can be cleared by press and hold down the "C" for 2 seconds.

**ServiceValues:** This menu provides information of operating conditions.

**ServVal/Primary:** Primary system values.

**ServVal/Secondary:** Secondary system values.

**Settings:** Under this is menu the user set basic values, operate levels, time delays and active group.

**BasSet/Freq:** Rated relay frequency.

**BasSet/MainCTR:** Ratio of main CT's.

**Func/Grp1/OvCurr:** Operate levels, times, etc.

**Func/Grp1/EarthFl:** Operate levels, times, etc.

**Func/Grp2/OvCurr:** Operate levels, times, etc.

**Func/Grp2/EarthFl:** Operate levels, times, etc.

**Func/BrkFail:** Start by, operate levels, times, etc.

**Func/IntOvRe<sup>a)</sup>:** Start by, times, etc.

**Func/AutoRec<sup>a)</sup>:** Start by, shoots, times, etc.

**ActiveGroup:** Selection of the active setting group.

**Configuration:** Under this is menu the user configure I/O signals and communication settings.

**Config/BinOut:** Function to selected binary output with a mark.

**Config/BinIn:** Binary input signal to selected function with a mark.

**HMI:** Under this menu the user select the appearance of the display.

**HMI/Display:** Contrast level and turn-off or not.

**HMI/Indicat:** Led's to remain or not.

**Lang/Språk:** In this menu the user select language, English/Svenska.

**Information:** In this menu the user retrieve information of the relay, type, variant, options, etc.

**Test:** In this menu the user test the binary I/O signals during installation.

**BinOut:** Activate selected output by pressing "E".

**BinIn:** Binary input will be inverted when it's energized (RL voltage).

**Saving dialogue:** Appears when the user going upwards in the menu tree from a menu which consist editable values.

**YES:** Confirm the last setting(s) and exit.

**NO:** Confirm the previous setting(s) without any changes and exit.

**CANCEL:** Returns to the last setting(s) or to the last menu.

891000148.vsd

## **WARNING AND NOTE SIGNS**

### **The warning sign**

The warning sign informs the user that certain operations should be avoided in order to prevent human injuries or damage to equipment.

### **The note sign**

The note sign informs the user to be careful when using the product in certain situations and notifies the user to facts that could be of special interest during certain operations.



### **Warning!**

*Always avoid to touch the circuitry when the plastic cover, which covers the relay, is removed. The product contains electronic circuitries which can be damaged if exposed to static electricity (ESD). The electronic circuitries also contain high voltage which is lethal to humans.*

### **Warning!**

*Never plug or withdraw a relay from the terminal base without blocking the output circuits or interrupting the auxiliary DC supply. Otherwise there is a risk of unwanted operations.*

### **Warning!**

*Never disconnect a wire in a current circuit. Always be sure to short-circuit the secondary phase terminals of the current transformers to neutral before the circuit is opened. An opened current circuit will produce an extremely high voltage which is lethal to humans.*



### **Note!**

*If the LED's are flashing or the green 'In service' LED is dark, an internal fault has occurred. Read the self supervision section in the technical reference manual for further information.*

### **Note!**

*The compact current relay is designed for a maximum continuous current of four times rated value.*

### **Note!**

*The length of the EMC-cable must be as short as possible when connecting to EMC-earth. Withstand against electrical disturbances could otherwise be hazardous.*

**CONNECTION AND TERMINAL DIAGRAMS**

**Connection**

RXHL 411 requires a DC/DC-converter for auxiliary voltage supply +/- 24 V; RXTUG 22H is recommended. The relay is delivered with 4 short-circuiting connectors RTXK for mounting on the rear of the terminal base. The connectors will automatically short-circuit the current input when the relay is removed from the terminal base.

**Terminal diagrams**

The relay is available in four variants excluding the transformer combinations. The variants and there terminal diagrams are shown below.

RXHL 411	Basic version, terminal diagram figure 1
RXHL 411	Basic version together with automatic reclosing function, terminal diagram figure 1
RXHL 411	Basic version together with binary I/O module, terminal diagram figure 2
RXHL 411	Basic version together with automatic reclosing function and binary I/O module, terminal diagram figure 2

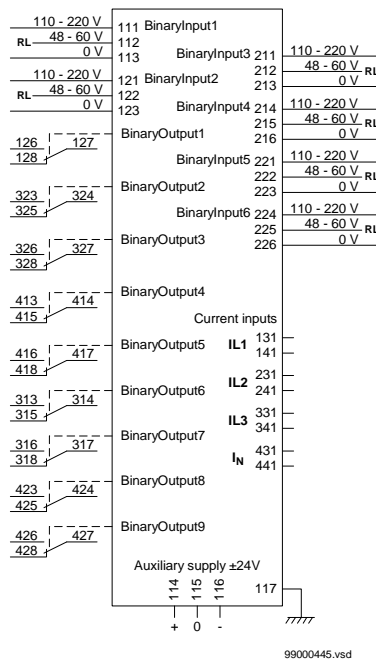
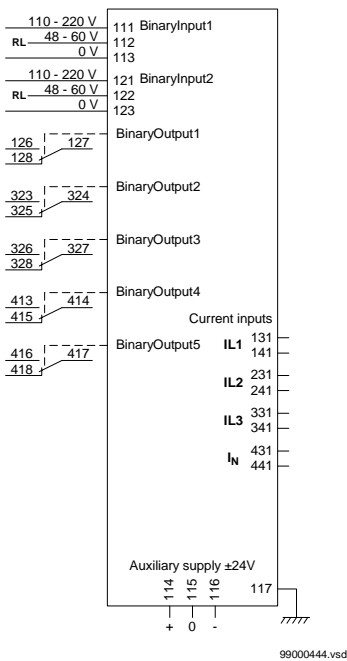


Figure 1: RXHL 411 basic version

Figure 2: RXHL 411 with binary I/O module